


# Calculating your required 'Chassis to Face' (C/F) measurement

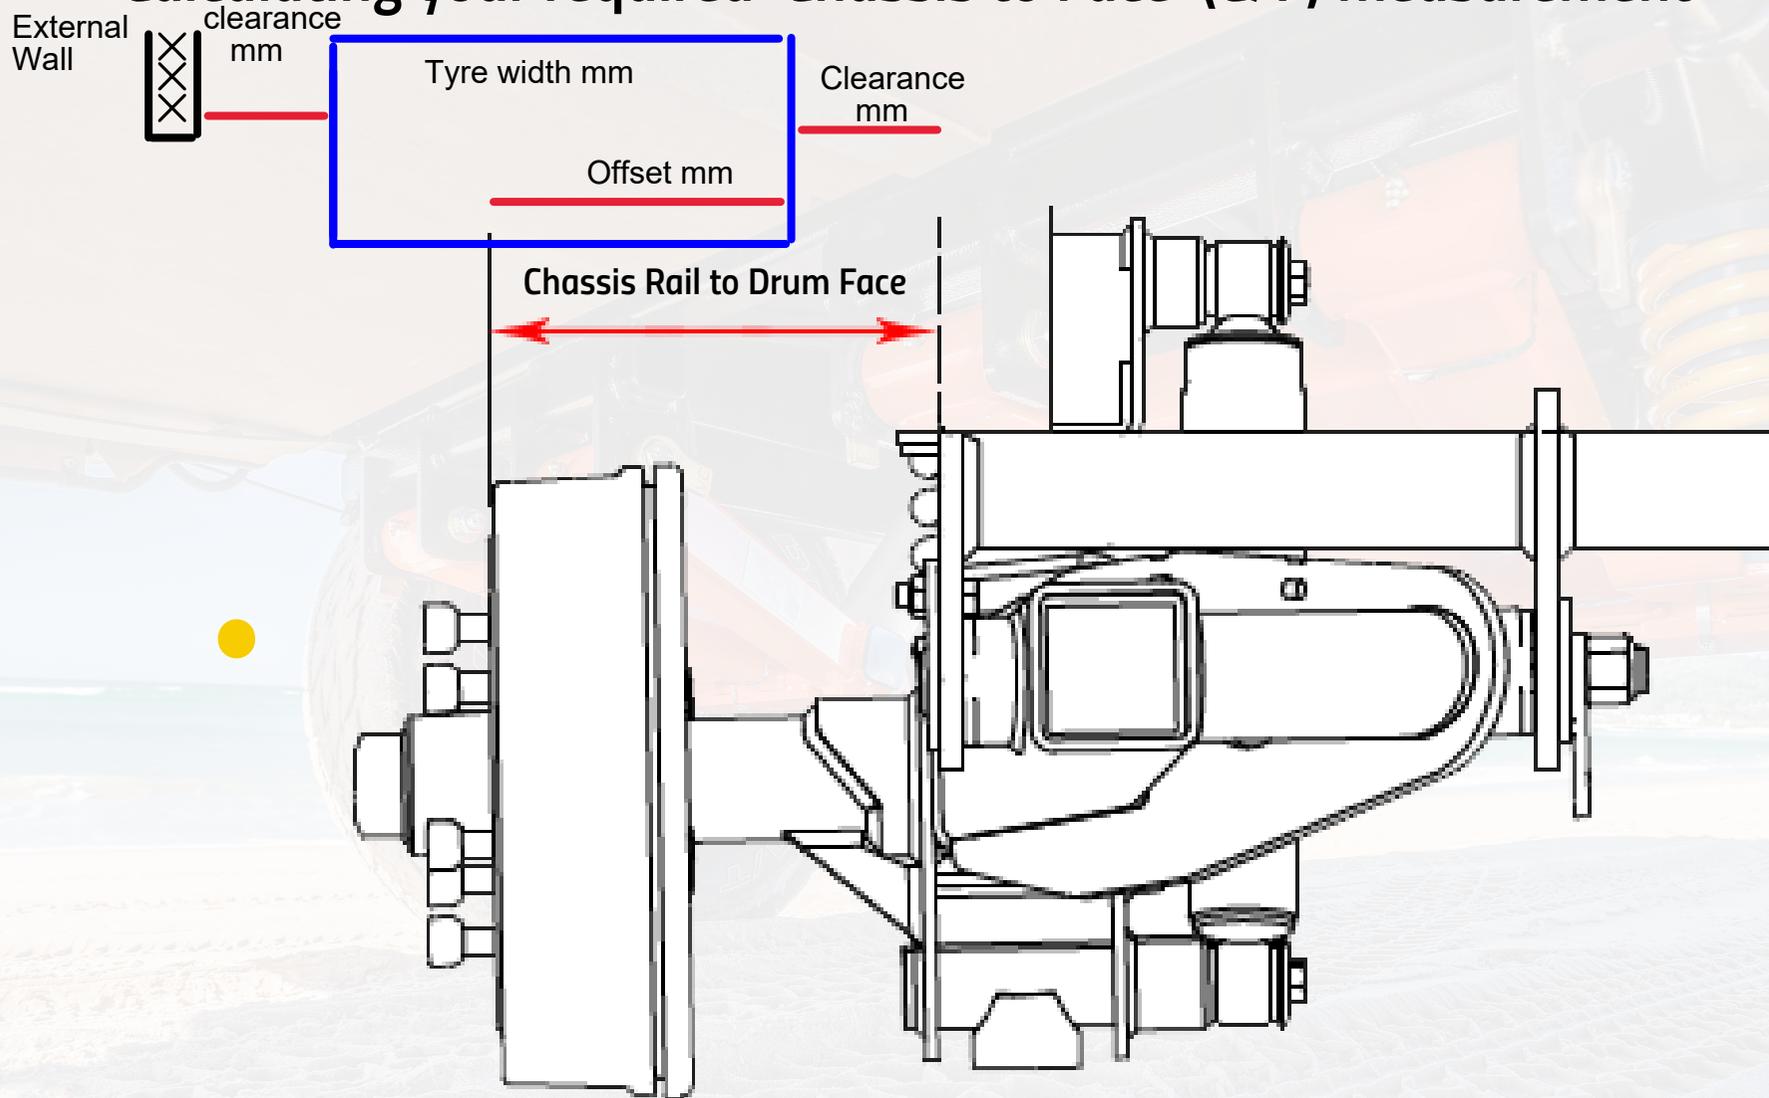

C/F is calculated by measuring from the outer drum face to the outer face of the chassis rail. An accurate C/F is vital in ensuring the wheel has the right amount of clearance when in motion.