


ATS4+EVBF2 Window Installation Instructions

Step 1: Cut hole as Diagram 1&2

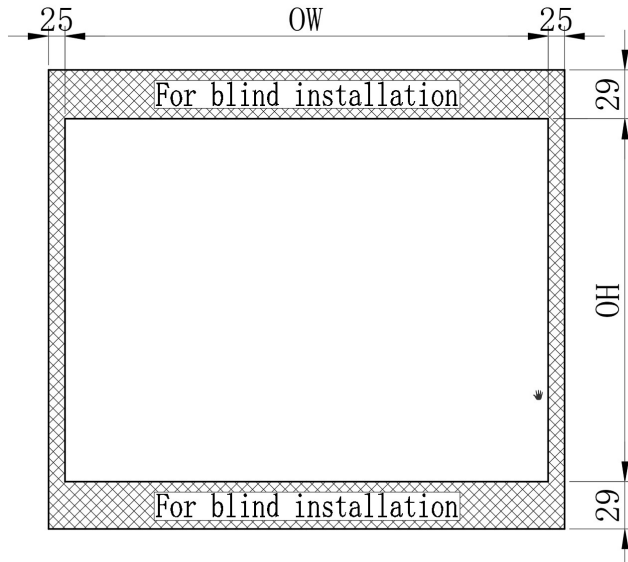

OH (opening height)=H+3mm OW(opening width)=W+3mm

Window size: 450X900

H=450mm W=900mm
OH=453mm OW=903mm

Diagram 1

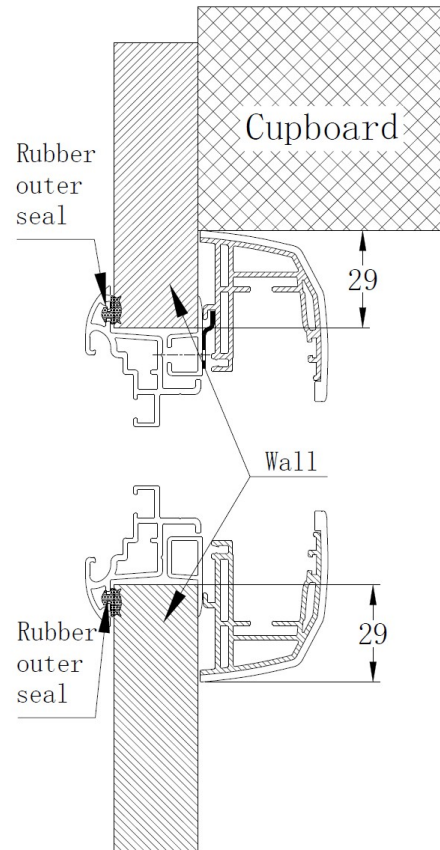


Diagram 2

Step 2: Fix outer panel and Inner frame to wall as Diagram 3, using set screw supplied.

NB: Do not over tight screws.

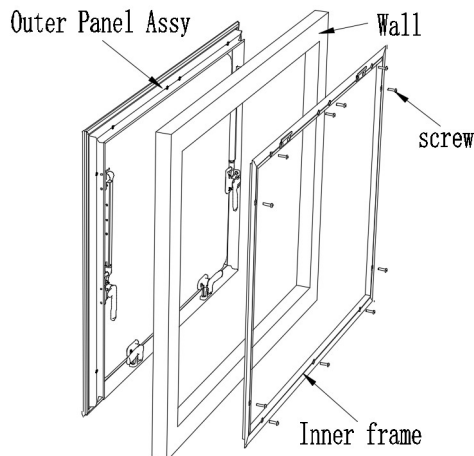


Diagram 3

Step 3: Position blind panel over the hook as Diagram 4, then slide down to locate into position.

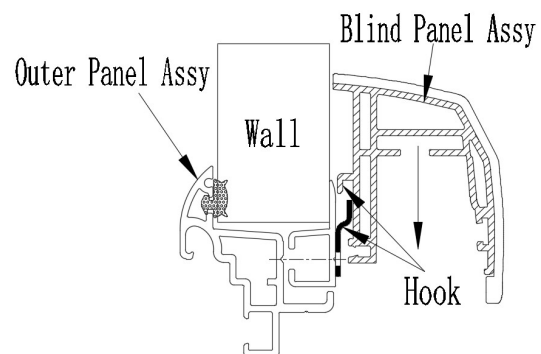


Diagram 4

AUSSIE TRAVELLER PTY LTD

Incorporated in Queensland A.C.N. 010 809 168 A.B.N. 81 010 809 168

Step 4: Fix blind panel to the wall by ST3.5x16 screw as diagram 5. Finally put the cover on blind panel. 4 screws and 4 covers.

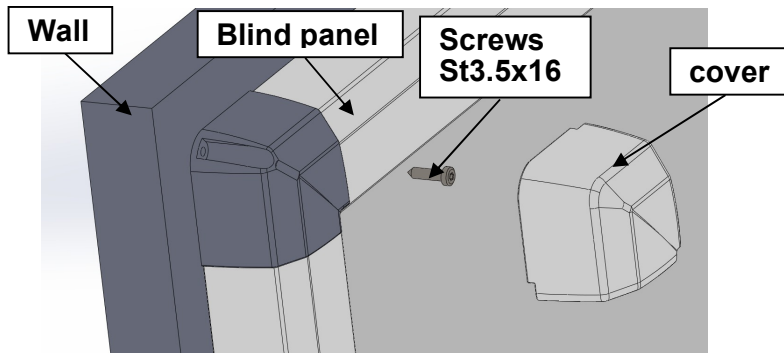


Diagram 5

Diagram 6

Wall Thickness (mm)	Screw specifications	Installation sections	sections
24-30mm	M4X14		
30-34mm	M4X20		
34-39mm	M4X14		
39-44mm	M4X20		
44-49mm	M4X14		
49-54mm	M4X20		